

SPICER


SD-AS-9

TO UP SHIFT

- START WITH SELECTOR IN DOWN POSITION
- SHIFT 1 - 2 - 3 - 4 - 5 RAISE SELECTOR
- SHIFT 6 - 7 - A

TO DOWN SHIFT

- SHIFT A - 7 - 6
- DEPRESS SELECTOR
- SHIFT 5 - 4 - 3 - 2 - 1

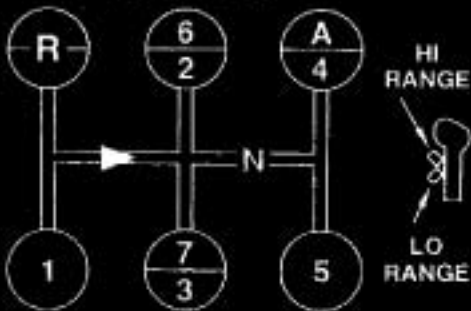

DO NOT CHANGE RANGE WHILE MOVING IN REVERSE

SPICER SUPPORT LINE *
(INCLUDING ALASKA & CANADA)
800 - 666 - 8688